


COLEMAN Series 3400 Electric Furnace

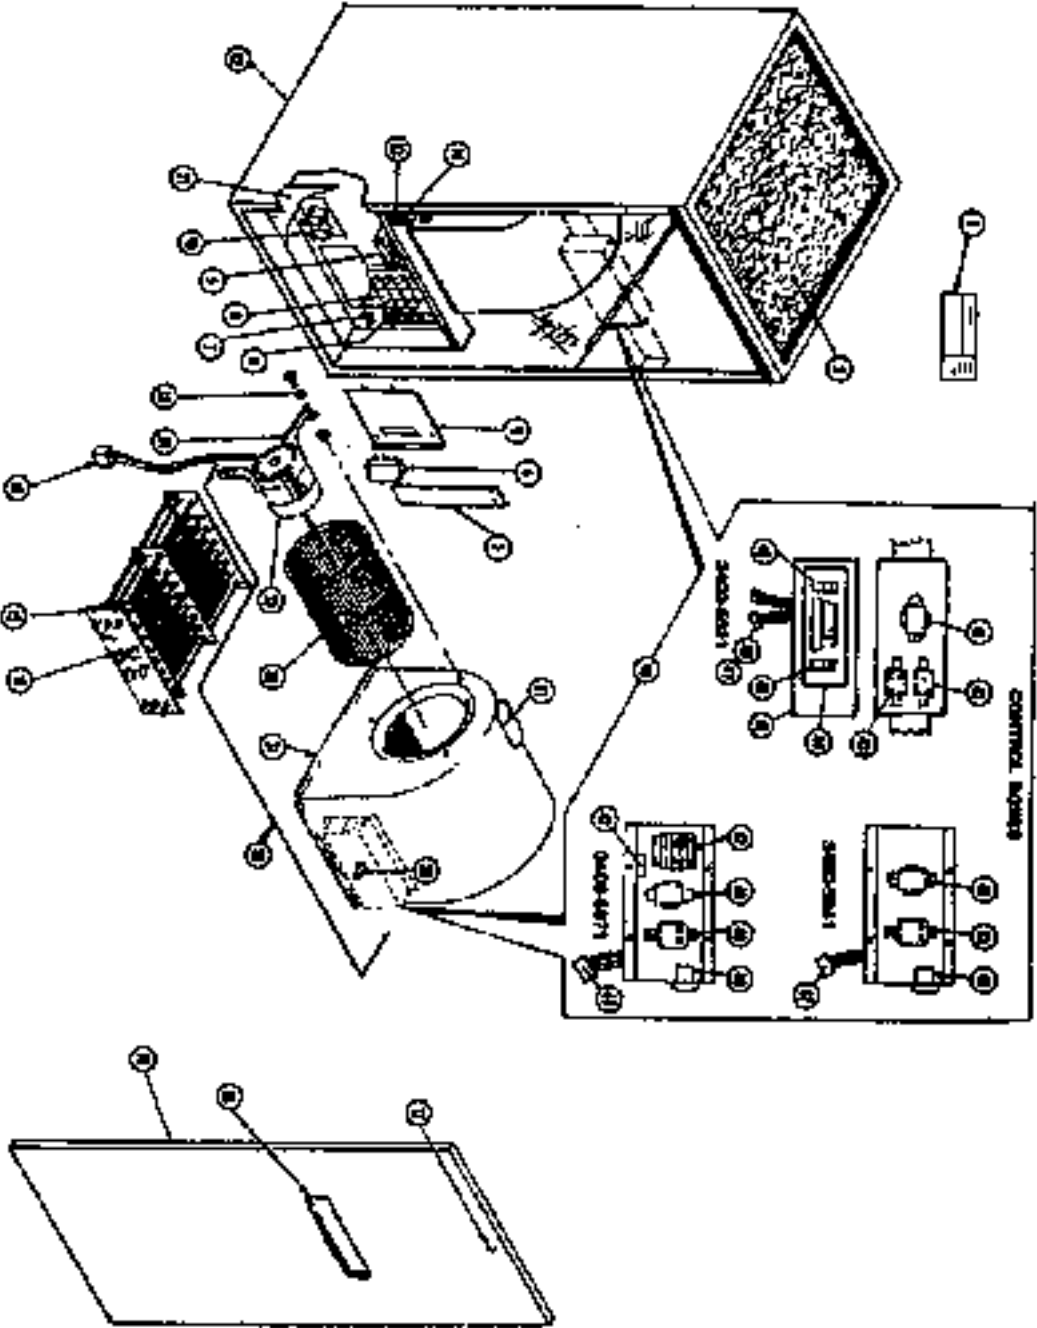

Ref #	Part #	Description	# Req.	Models Used On
1	3110-3771	Thermostat (Heating 24v)	1	All
2	1214-2521	Filter (20 x 20 x 1)	1	All
3	3400-1311 3400-1301	Cover (Service Entrance) Cover (Service Entrance)	1 1	All (Except 3400-811) 3400-811
4	3400-3291 3400A3281	Disconnect Plug Disconnect Plug	1 1	All (Except 3400-811) 3400-811
5	3400-1141 3400-1161	Fuse Door Fuse Door	1 1	All (Except 3400-811) 3400-811
6	3400-3281 3400-3261 3400-3271	Disconnect Assy (Less Fuses - Incl #4)	1 1 1	3400-811 3400-812, 815 3400-818, 820, 823
7	1216-229 1216-231	Ground Lug (Small) Ground Lug (Large)	1 1	All
8	6804-3131 3112-3131 6804-3161 6804-3161	Fuse (30 Amp BUSS) Fuse (40 Amp BUSS) Fuse (60 Amp BUSS) Fuse (60 Amp BUSS)	2 2 2 4	3400-812, 815 3400-812, 818 3400-811, 815, 818 3400-820, 823
9	3400-3841	Transformer 240v/24v BE#13736001	1	All
10	3400-3561 3400-3571 3400-3581	Sequencer	1 1 1	3400-811, 812 3400-815, 818 3400-820, 823
11	3400-503 3400-442 3400-506 3400-512 3400-513	Cover (Electrical Box)	1 1 1 1 1	3400-811 3400-812 3400-815 3400-818 3400-820, 823
12	3400-585	Casing Assembly	1	All
13	3110-3331	Fan Switch (Rocker - SPDT)	1	All (Except 3400-811, 812)
14	3400-530 3400-531 3400-532	Wire Bundle	1 1 1	3400-811, 812 3400-815, 818 3400-820, 823
15	3400-3321 3400-3341 3400-3351 3400-3361 3400-3371 3400-3381	Heat Element 10KW Use 3300A4111 Heat Element 12KW Use 3300A4131 Heat Element 15KW Heat Element 18KW Heat Element 20KW Heat Element 23KW	1 1 1 1 1 1	3400-811 3400-812 3400-815 3400-818 3400-820 3400-823
16	3400-3151 3400-3151 3400-3151	Limit Switch (Open 175 Close 125)	2 3 4	3400-811, 812 3400-815, 818 3400-820, 823
17	3110-3171	Latch	1	All
18	1539-035	Coleman Emblem	1	All
19	NLA	Front Panel (With Latch)- NLA	x	x
20	1971-615	Customer Envelope	1	All

www.mhrv.com

www.mhrv.com

Series 3400 Blowers

Ref #	Part #	Description	# Req.	Models Used On
30	3400-590	Blower	1	3400-811, 812, 815
	3400-591	Blower		3400-818, 820, 823
	3400-6901	Blower for A/C and Heat Pump Application		3400-811, 812, 815
	3400-7901	Blower for A/C and Heat Pump Application		3400-818, 820, 823
31	3400-536	Scroll	1	All
	3300-537	Scroll for A/C and Heat Pump Application		3400-811, 812, 815
	3300-538	Scroll for A/C and Heat Pump Application		3400-818, 820, 823
32	3400-3601	Blower Whhel (9-1/2 D x 8W)	1	All
	3400-3611	Blower Wheel (10-5/8D x 8W) for A/C App		3400-811, 812, 815
	3300-3611	Blower Wheel (12-5/8D x 8W) for A/C App		3400-818, 820, 823
33	1468-1209	Motor 230v 60Hz 2.2 Amp	1	3400-811, 812, 815
	1468-1209	Motor 230v 60Hz 2.5 Amp		3400-818, 820, 823
	3400-3219	Motor 230v 60Hz for A/C Application		3400-811, 812, 815
	3400-3229	Motor 230v 60Hz for A/C Application		3400-818, 820, 823
34	7670-5391	Motor Clamp	1	All
	8680-5391	Motor Clamp for A/C Application		All
35	7670-3551	Motor Mount (3/Pkg)	1	All
36	3400-629	Blower Plug (with Wires)	1	All
	3200-349	Blower Plug (without Wires)		
37	1499-346	Capacitor (7.5-370) for A/C Application	1	3400-811, 812, 815
	1499-361	Capacitor (10-440) for A/C Application		3400-818, 820, 823
38	3110-3051	Selector Switch for A/C Application 3-Position - 4 Termionals - No Knob	1	All

Series 3400 Control Boxes

Ref #	Part #	Description	# Req.	Models Used On
40	3400-5821	Control Box 2 Wire 2-5 Ton A/C	1	All
	3400-5841	Control Box 4 Wire 2-5 Ton A/C		
	3400-5871	Control Box 7 Wire Heat Pump		
41	3300-3861	Transformer Basler #BE-13736-002 (240/24 v 50/60 Hz Coil)	1	All
42	3110-3311	Thermostat Reversing Relay 4 Terminals	1	2-Wire Control Box
	3110-3861	Thermostat Reversing Relay 24v 50/60 hz		7 Wire Control Box
43	3110-3301	Blower Relay 24v 50/60 hz Coil	1	All
44	1539-022	Decal	1	2 Wire Control Box
45	3110-3321	System Switch (Hear/Cool)	1	2 Wire Control Box
46	3110-3331	Fan Switch (On/Auto)	1	2 Wire Control Box
47	3400-533	Wire Bundle	1	2 Wire Control Box
	3400-517	Wire Bundle		4 Wire Control Box
	3400-519	Wire Bundle - Male		7 Wire Control Box
	3400-522	Wire Bundle - Femal		7 Wire Control Box
48	3200-348	Connector Cap	1	All
49	3400-177	Control Box Cover	1	2 Wire Control Box